



Installation of Permanent Plant Benchmarks

What installing permanent plant benchmarks means for your facility.

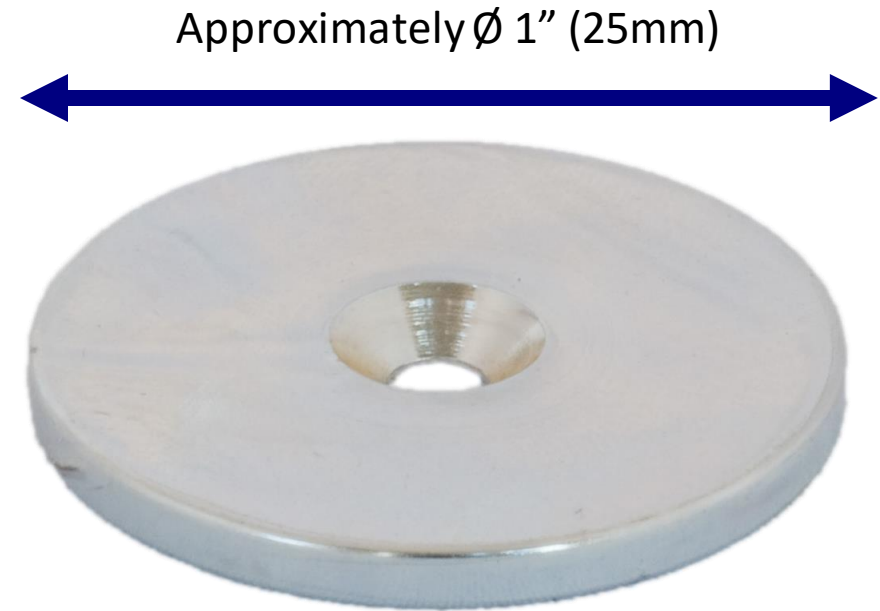

Example of Installed Washer

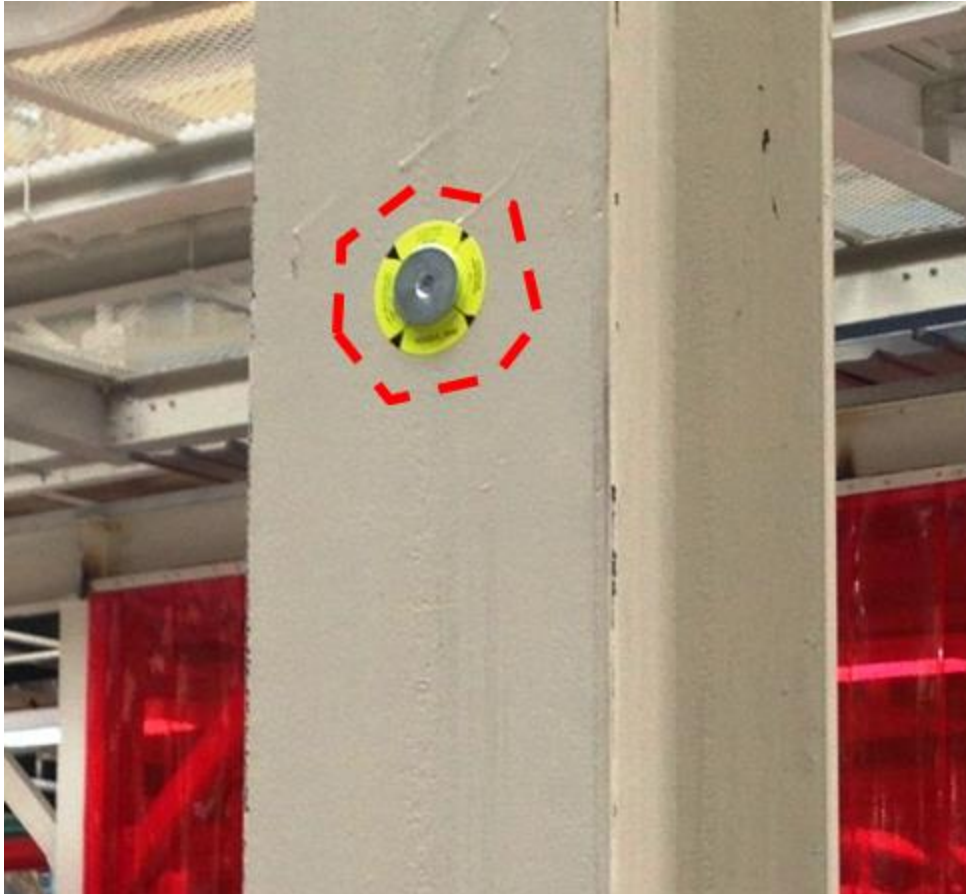

*Red dashed outline shown to highlight washer location in this photo only. Real washers do not get the red line just the, optional, yellow sticker.



Installation to Steel Column



- Use of a cordless drill to drill 3.7mm hole.
- Magnetic dust collector used to eliminate mess.
- Single, self tapping screw holds the washer in place.



Installation to Concrete

- In rare cases washers need to be installed on concrete surfaces.
- Drill bit used: Hilti TE-CX 6/17
- Fastener used: Steel screw - MFT-Taptite 4x8H recessed

